



NESPRESSO[®]

DESCALING
GUIDE





IMPORTANT INFORMATION BEFORE YOU BEGIN

Nespresso recommends descaling every 3 months or 300 capsules (whichever comes first).

Nespresso machines should be descaled with a *Nespresso* Descaling Kit which contains a natural solution that thoroughly dissolves the scale build up. Other solutions (such as vinegar or store-bought descalers) may cause damage to your *Nespresso* machine.

Descaling solution can damage or discolor surfaces so we suggest placing something underneath your machine in case a spill should occur. If a spill does occur, please make sure to clean up the solution immediately to avoid any damage.

Keep descaling solution out of reach of children.

In case of contact with eyes, rinse immediately with plenty of water for 15 minutes and seek medical advice.

Do not swallow or ingest the descaling solution.

The descaling solution may be irritating to the eyes and skin.

Avoid filling up the water tank during the descaling process.

After descaling, wipe down the machine with a damp cloth.




LATTISSIMA ONE



Duration: 20 minutes

STEP 1

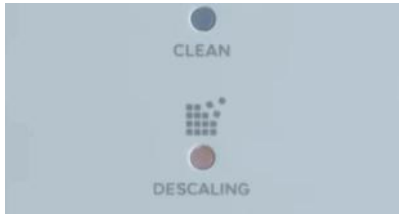

When the descaling indicator light shines orange, it is time to descale.

STEP 2



Eject the capsule. Close the lever.

STEP 3



Empty the capsule container and drip tray and then reinsert. The cup support can be removed during the descaling process.

STEP 4



After removing the water tank, remove the descaling pipe from the back of the machine.

STEP 5



Plug the pipe into the steam connector on the right of the machine.

STEP 6



The espresso button will blink white and the descaling light will begin blinking orange.

STEP 7



Fill the water tank two thirds full with water and add 1 packet of *Nespresso* descaling solution and place tank on the machine.

STEP 8



Place a receptacle underneath the coffee outlet and descaling pipe.


STEP 9



Press and release the espresso button and descaling solution will begin to flow alternately from the coffee outlet, descaling pipe and drip tray outlets.



STEP 10

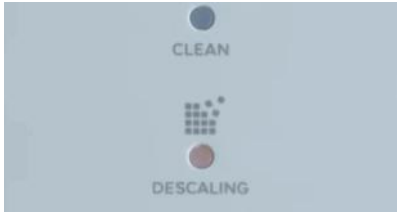

The descaling light will blink orange throughout the entire process. The Espresso button will begin blinking white when descaling solution is done running through.

STEP 11



Discard the descaling solution, rinse and wash the water tank thoroughly and refill the tank to MAX line with fresh water before placing back onto the machine.

STEP 12



Empty the capsule container and drip tray and reinsert.

STEP 13



Place the empty receptacle under the coffee outlet.

STEP 14



Press and release the espresso button and rinsing will alternate between the coffee outlet, descaling pipe, and drip tray outlets.

STEP 15



The machine will automatically power off once the rinsing is complete. Discard the rinsing water.

STEP 16



Empty and rinse the capsule container and drip tray, then reinsert.

STEP 17



Rinse and store the descaling pipe.

STEP 18



Refill the water tank and place it on the machine. Wipe down the machine with a damp cloth. Let the machine rest for 10 minutes before using.